



Street & Performance Electronics
304 Smokey Lane
North Little Rock, Arkansas 72117
Phone: (501) 945-0354 FAX: (501) 945-0370
www.StreetandPerformanceElectronics.com

JAAK-SMART

Remote Jack Mount

Installation Instructions


(1997-2006 JEEP Wrangler TJ Part #779706)

Important!
Read all instructions
before you begin
installation.

1. Loosen and remove hood hinge bolts on one side of hood using a TORX T-40 bit. Do not disturb hood alignment.
2. Slide a 1/2" x 3" stainless steel bolt up through slot of JAAK-SMART jack mount. Head of bolt should be slide in the cavity.
3. Install JAAK-SMART jack mount (bolt should float in the slot) onto hood hinge. Bolt the hinge and JAAK-SMART jack mount onto hood using the supplied 8mm x 35mm stainless steel socket cap bolts. Repeat for other side.
4. Ratchet jack mechanism to lowest point. With some help, carefully, lay jack across newly installed JAAK-SMART jack mounts (nose piece of jacking mechanism facing forward). Allow the 1/2" bolts to engage the jack rail. Place large washer and wing nut on each 1/2" bolt. Center the jack to suit taste. Tighten the wing nut to secure jack to JAAK-SMART jack mounts.
5. Carefully remove windshield hood bumpers from the hood. Disconnect the windshield washer lines from washer nozzles. Remove the short washer hose from check valves. Replace short hoses with the supplied washer hose. Install washer nozzles into windshield bumper hole in hood. Connect extended hose to washer nozzles.

The design of the 779706 JAAK-SMART jack mounts allows the user to open hood to stock position (open hood far enough to use the stock prop rod). If you fully open the hood, jack to cowl interference will occur.

DO NOT OPEN THE HOOD FARTHER THAN STOCK POSITION.

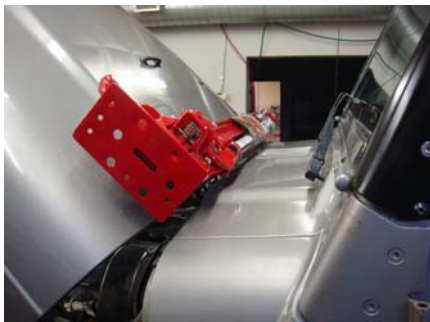

Parts List

- 2 JAAK-SMART jack mounts
- 2 1/2" x 3" stainless bolts
- 2 1/2" flat washers
- 2 1/2" wing nuts
- 6 8mm x 35mm stainless bolts
- 16" 5/32" washer hose